


# Gun cleaner

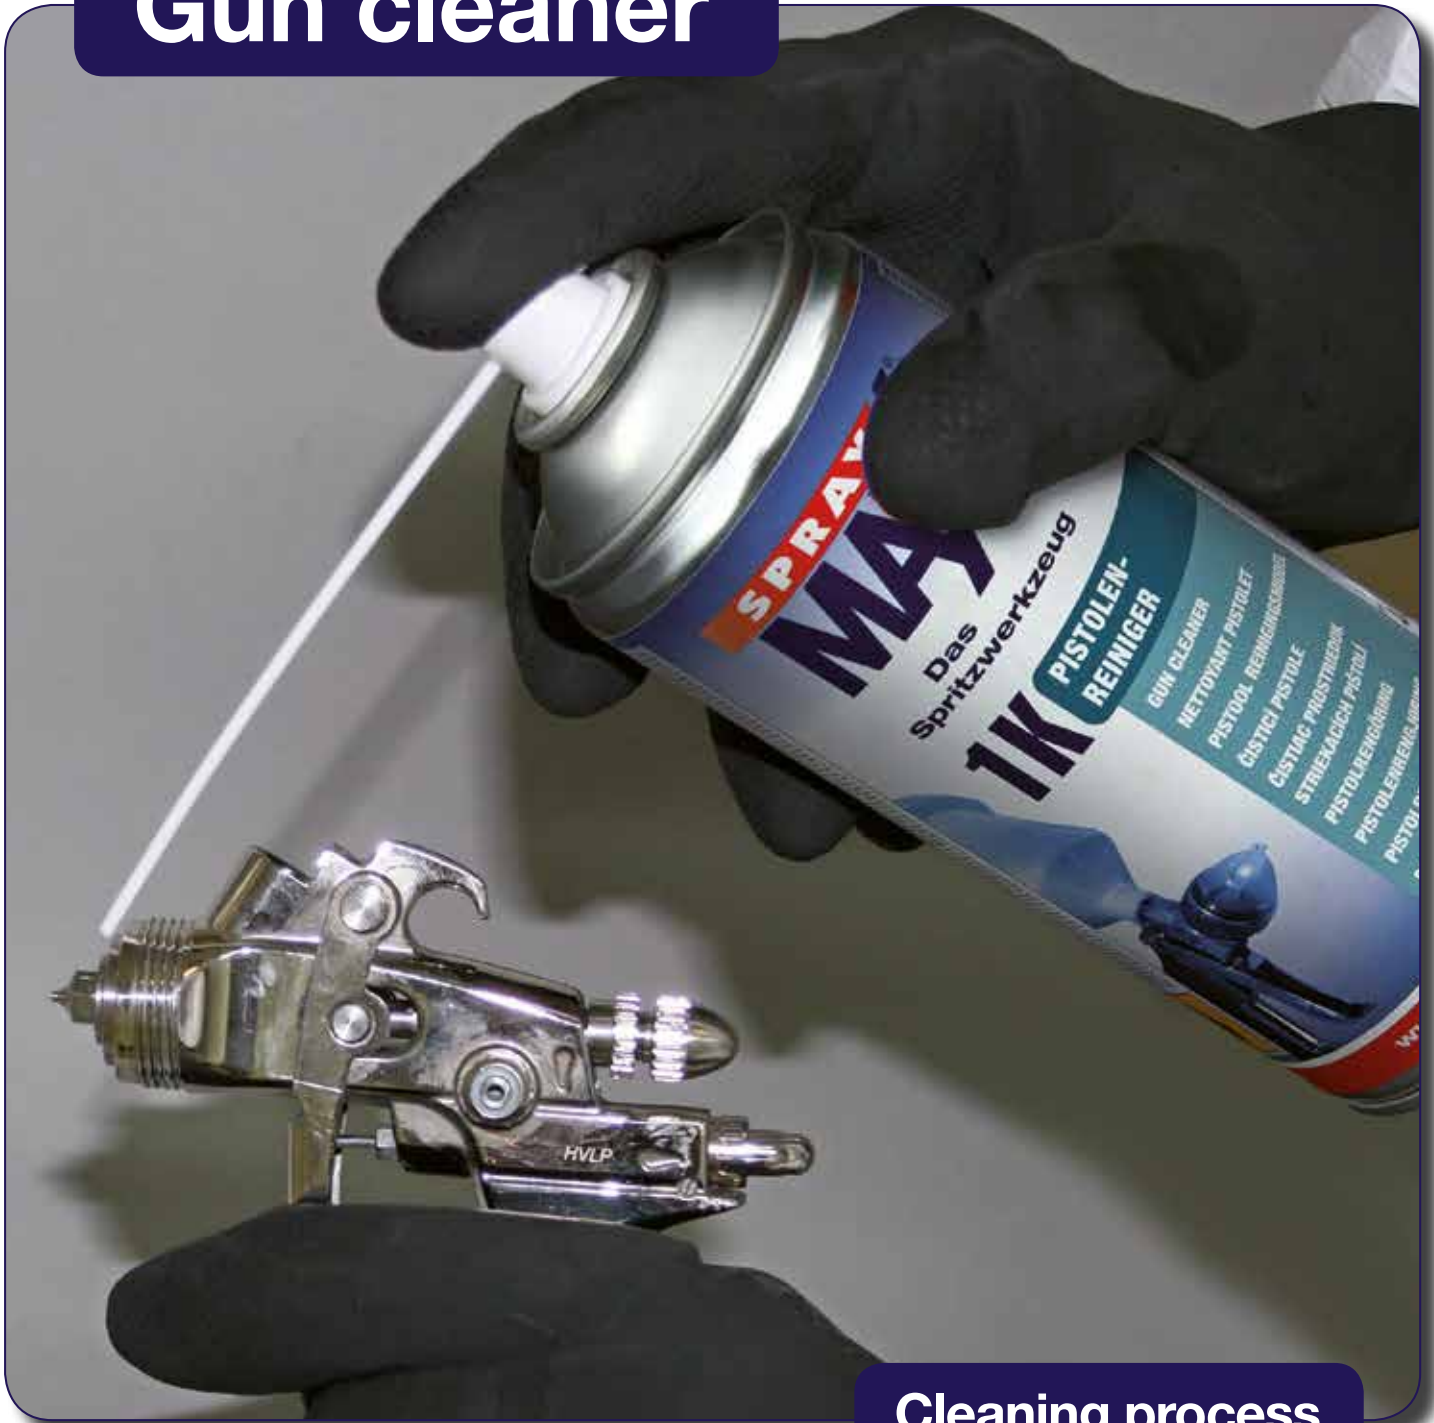

Cleaning process

# Cleaning the spray gun


**Important:**

Leave the spray guns connected to the air supply during cleaning to avoid dirt entering the air channels.

## Intermediate cleaning



Unscrew the paint cup.

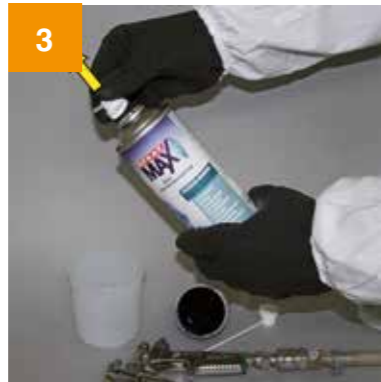

Remove the standard spray head by twisting slightly.



Place the lancelet spray head on top by twisting slightly.



Clean the paint cup inside from top to bottom.




Turn the gun around and spray out any residual paint (leave air supply on minimum setting).



Spray out the residual paint from the top (leave air supply on minimum setting).




Unscrew air nozzle.

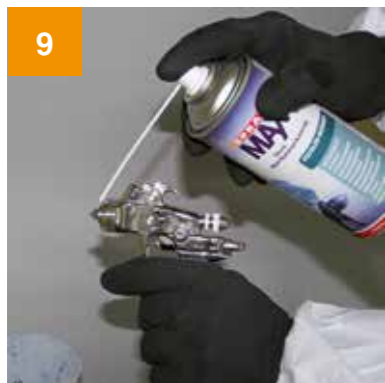


Clean the paint nozzle inside and outside.



Spray off the residual paint from the front. Tilt the gun slightly downwards.

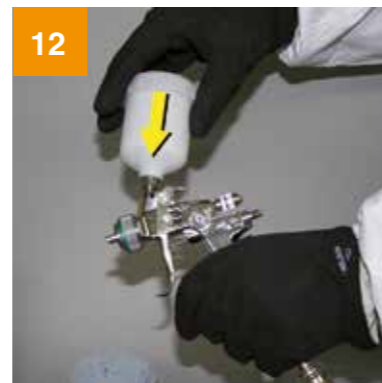

Screw on the paint cup and air nozzle.

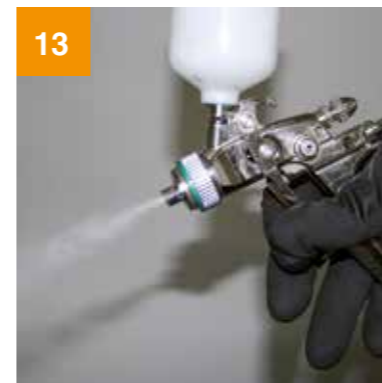

Spray the cleaner in the paint cup and spray out the spray gun.




Clean the paint gun on the outside.


- For easy cleaning (e.g. when changing the product / paint)
- For cleaning water/-solvent-based paints
- For 1K and 2K paints
- Even removes slightly dried paint easily
- Effective in combination with spray gun cleaning devices

## Main cleaning

Step 1 - 6 see above

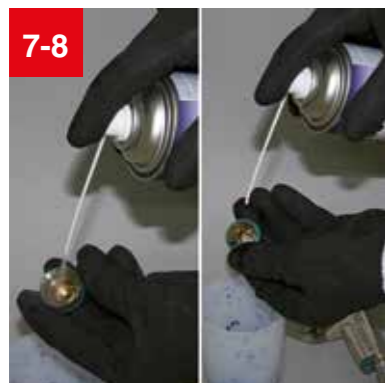

Unscrew air nozzle and clean the paint nozzle on the outside. Clean the nozzle head on the inside. Clean the nozzle head on the outside.

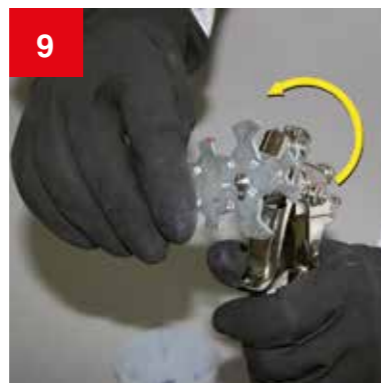


Unscrew the paint nozzle. Remove and clean the paint needle.




Spray out residual paint from the top (leave air supply on minimum setting).




Spray out residual paint from the front.

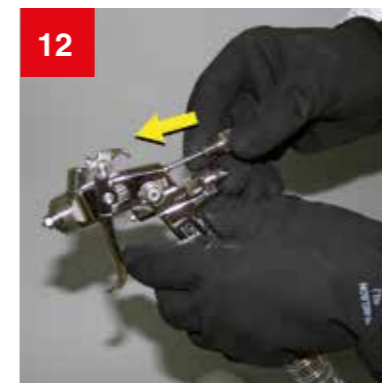

Assemble the paint needle, paint nozzle and air nozzle.

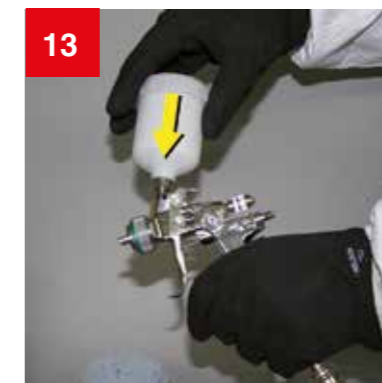

Screw on the paint cup and paint nozzle.

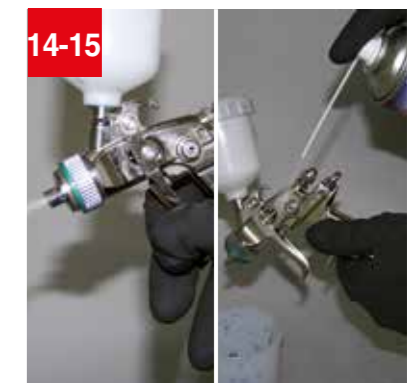

Spray the cleaner in the paint cup and spray out the spray gun. Clean the paint gun on the outside.

## Variator cleaning process




1 Remove the standard spray head by twisting slightly.



2 Place the Variator on top and twist.



3 Clean the Variator one sec on level 1 (left) by pressing down.

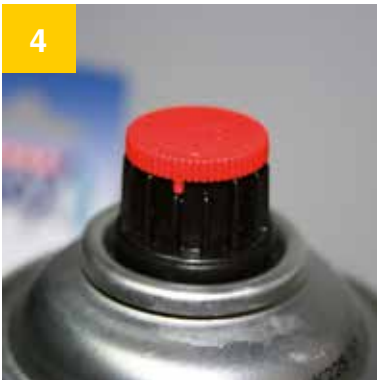

4 Clean the Variator one sec on level 2 (middle).



5 Clean the Variator 1 sec on level 1 (right) and slightly rub the nozzle at the front.



6 Remove Variator by twisting.



7 Place the standard spray head on top by twisting slightly.



THE WORLD OF  
SPRAYPAINT